

Sawafuji Starter



24V/11KW/12T SA6D140 S6D125
KOMATSU:600-813-3922 SAWAFUJI:0351-702-0610~0660+0880



24V/11KW/11T SA6D155 KOMATSU:600-813-4811 SAWAFUJI:0351-702-0820~0822



24V/11KW/11T KOMATSU:600-813-3942 600-813-3992 SAWAFUJI:0351-702-0710~0712



24V/11KW/12T SA6D108
KOMATSU:600-813-8810 SAWAFUJI:0351-702-0250



24V/11KW/11T SA6D170 NT855
KOMATSU:600-813-3963 SAWAFUJI:0351-702-0510



24V/4.5KW/11T HINO J05C S05C
HINO:28100-2625A SAWAFUJI:0355-502-0012~0016



24V/4.5KW/11T HINO:28100-78090



24V/4.5KW/11T HINO FD6 FE6
HINO:23300-Z5578
SAWAFUJI:0355-502-0110



24V/5.5KW/11T HINO:EH500 EH700
H06C H07C HINO 28100-2040 28100-2044 SAWAFUJI:0350-552-0330~0339



24V/6.0KW/11T HINO EF750 EM100
HINO:28100-1520 28100-1740
SAWAFUJI:0350 602 0110~0119



24V/6.0KW/11T HINO EK100 EL100
HINO:28100-1490 28100-1640
SAWAFUJI:0330-602-0113



24V/6.0KW/11T NISSAN PD6 PE6
NISSAN:23300-96004 23300-96026
SAWAFUJI:0351-602-0010~0016

Sawafuji Starter



24V/6.0KW/11T NISSAN RD8 RE8
NISSAN:23300-97001 23300-97002
SAWAFUJI:0351-602-0022



24V/6.0KW/11T NISSAN RF8
NISSAN:23300-97505 23300-97507
SAWAFUJI:0350-602-0233



24V/6.0KW/13T HINO ED100 ER100
HINO:28100-1081 SAWAFUJI:0300-602-0812 0300-552-0420



24V/5.0KW/11T NISSAN:PF6 NF6 PG6
NISSAN:23300-96504 SAWAFUJI:0350-602-0260



24V/5.0KW/11T NISSAN:FE6 FD6
NISSAN:23300-Z5002 SAWAFUJI:0350-602-0570



24V/5.0KW/11T NISSAN NE6
NISSAN:23300-95009
SAWAFUJI:0350-602-0340



24V/5.0KW/13T HINO DK10
HINO:28100-1400A SAWAFUJI:0300-552-0010~0011



24V/6.0KW/13T HINO EB300 EB400
HINO:28100-1230 28100-1590
SAWAFUJI:0300-602-0312



24V/5.0KW/11T HINO W04D 1W
HINO:28100-1890 SAWAFUJI:0350-402-0210~0229



24V/5.0KW/11T HINO W06E W06D
HINO:28100-1813 28100-2100
SAWAFUJI:0350-502-0020~0029



24V/7.5KW/11T HINO EF750
HINO:28100-2590B
SAWAFUJI: 0350-702--0541



24V/7.5KW/11T MITSUBISHI:S6B
MITSUBISHI:04301-37010 04301-36100
SAWAFUJI:0340-552-0110~0111